 
 

 
 

 
 


 



 






Direct OEM Steering Remote Function

No need for a third party adapter for most Japanese/Korean cars.


TOYOTA (20P)	TOYOTA (28P)	TOYOTA (26P)	TOYOTA (10P+6P)	HONDA (20P-B)
				
Input 1 : Green Input 2 : Purple ST REMOTE GND : Gray	Input 1 : Green Input 2 : Purple ST REMOTE GND : Gray	Input 1 : Green Input 2 : Purple ST REMOTE GND : Gray	Input 1 : Green Input 2 : Purple ST REMOTE GND : Gray	Input 1 : Green Input 2 : NC ST REMOTE GND : Gray
HONDA (20P-A)	HONDA (24P)	NISSAN (16P-A)	NISSAN (20P)	NISSAN (16P-B)
				
Input 1 : Green Input 2 : NC ST REMOTE GND : Gray	Input 1 : Green Input 2 : NC ST REMOTE GND : Gray	Input 1 : Green Input 2 : Purple ST REMOTE GND : Gray	Input 1 : Green Input 2 : Purple ST REMOTE GND : Gray	Input 1 : Green Input 2 : Purple ST REMOTE GND : Gray
MITSUBISHI (20P)	MAZDA (24P)	SUBARU (20P)	SUBARU (8P)	SUZUKI (20P)
				
Input 1 : Green Input 2 : NC ST REMOTE GND : Gray	Input 1 : Green Input 2 : NC ST REMOTE GND : Gray	Input 1 : Green Input 2 : NC ST REMOTE GND : Gray	Input 1 : Green Input 2 : NC ST REMOTE GND : Gray	Input 1 : Green Input 2 : NC ST REMOTE GND : Gray
ISUZU (16P)	HYUNDAI / KIA (24P-A)	HYUNDAI / KIA (24P-B)	<p>The information for each vehicle above was investigated by JVCKENWOOD Asia Headquarters, and may not cover all of the connector types. Please contact your local JVC Electronics dealers for details.</p>	
				
Input 1 : Green Input 2 : NC ST REMOTE GND : Gray	Input 1 : Green Input 2 : NC ST REMOTE GND : Gray	Input 1 : Green Input 2 : NC ST REMOTE GND : Gray		

 Location of Steering Remote Connector

If the vehicle is equipped with an OEM steering remote controller, the steering remote connector is commonly located in the console.

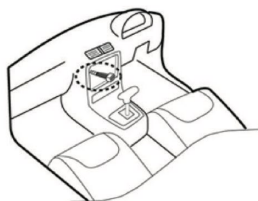


How to view Steering Remote Connector

 

All steering wheel remote controls above are vehicle side connectors and drawn from the side. (view indicated by arrow)

Steering Remote Cable (included in the unit)

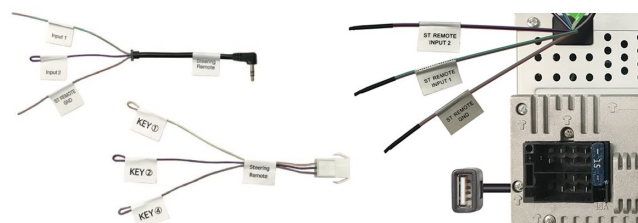

- 1) Look for a steering remote connector that is the same shape as in the image above in the console.
- 2) Connect cables to the pins shown in matching colors on the above list of connectors.


How to Open the Setup Screen



Eg. KW-V230BT

- 1 Touch "SETTING" icon.
- 2 Select "System".
- 3 Select "User Interface".
- 4 Select "Steering Remote Controller".

How to Sync the OEM Steering Remote Function

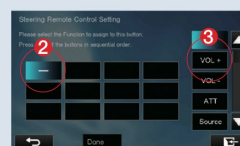

- 1 Press and hold the "Volume Up" button.
- 2 This icon appears.
- 3 Touch "Volume Up" key.



- 4 The function will be synchronised.
- 5 Repeat the same procedure.